

10901 / # 10902 HUB PULLERS

Fruehauf Hub Puller (Part #10901)

- 1) Remove hub cap.
- 2) Ensure hub threads are in good condition, clean and free of debris.
- 3) Back the forcing screw of the "Tiger Hub Puller" out.
- 4) Thread the "Tiger Hub Puller" into the hub by hand using the two tabs on the side of the tool. (If the tool will not thread in by hand, check hub threads for damage)
- 5) Once the tool is into the hub tight, begin to turn the forcing screw with either a hand or impact wrench. (up to ½" drive)
- 6) Once the wheel assembly has been removed, unscrew tool from hub and repeat on remaining hub(s).



OPERATING INSTRUCTIONS

Rockwell Hub Puller (Part #10902)

- 1) Remove hub cap.
- 2) Ensure contact surface where the tool meets the hub is clean and free of debris..
- 3) Back the forcing screw of the "Tiger Hub Puller" out.
- 4) Using the bolts which fasten the cap onto the hub, secure the "Tiger Hub Puller" to the hub. (Do not over-tighten)
- 5) Begin to turn the forcing screw with either a hand or impact wrench. (Up to ½" drive)
- 6) Once the wheel assembly has been removed, detach tool from hub, and repeat on remaining hub(s).



TIGER TOOL
International Incorporated

Phone: 1-800-661-4661