

PWC-2950 ASSEMBLY INSTRUCTIONS

NOTE: WHEN UNPACKING COMPONENTS, USE CAUTION WITH TOWER ARM ATTACHED TO PALLET BESIDE MACHINE. IF UNATTENDED, IT CAN FALL OFF PALLET CAUSING PRESSURE GAUGE TO BREAK OFF THE TOWER.

- 1) REMOVE ACCESS COVER FROM SIDE OF MACHINE.
- 2) MOUNT TOWER ONTO MAIN BODY USING 4 BOLTS SUPPLIED.
- 3) ATTACH THE TWO 13MM PLASTIC AIR LINES TO THE NIPPLES ON THE BOTTOM OF THE TOWER.
IT DOESN'T MATTER WHICH LINE TO WHICH NIPPLE. [FIG. 1]



FIGURE 1

4) INSTALL COIL SPRING ONTO THE HEX SHAFT AT THE TOP SIDE OF THE SWING ARM. SECURE USING BLACK CAP AND 8MM ALLEN SCREW. [FIG. 2]



FIGURE 2

5) INSTALL SWING STOP SCREW IN TO SWING ARM. [FIG. 3]

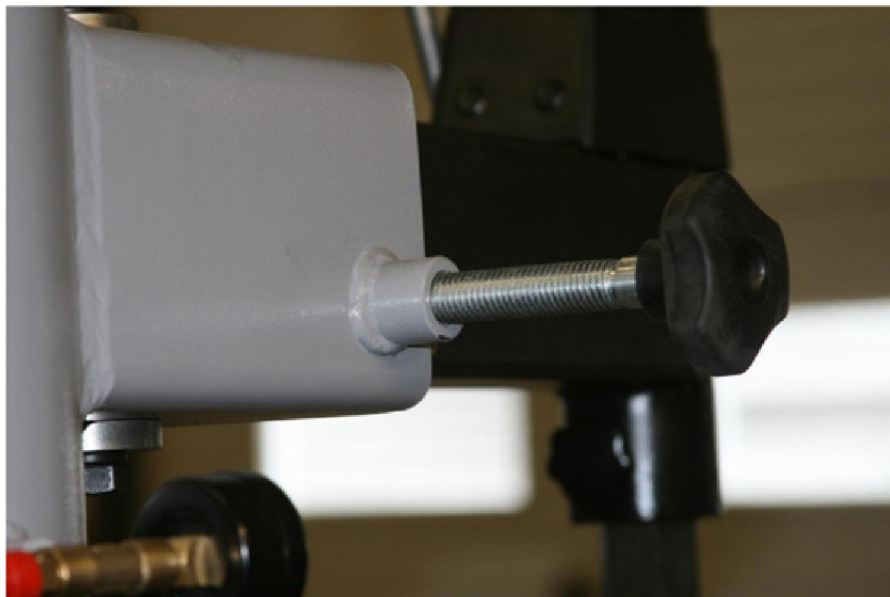


FIGURE 3

6) MOUNT GAUGE ASSEMBLY ONTO TOWER AND ATTACH 8MM PLASTIC AIR LINE. [FIG.4]



FIGURE 4

7) MOUNT REGULATOR / OILER TO REAR OF MACHINE. UNSCREW OIL RESERVOIR, FILL HALF WAY WITH LIGHT MOTOR OIL

REINSTALL OIL RESERVOIR TAKING CARE THAT "O" RING IS PROPERLY SEATED. [FIG.5]



FIGURE 5

ATTACH SHOP AIR AND WAIT FOR TANK TO FILL. CHECK CONNECTIONS FOR LEAKS. IF YOU HEAR A LEAK, THE LINE IS PROBABLY NOT SEATED. PUSH LINE INTO NIPPLE TO SEAT.

PLUG POWER CORD INTO 110V OUTLET.

OPERATE ALL FUNCTIONS TO INSURE THEY OPERATE PROPERLY.

REINSTALL ACCESS COVER.