



10301
10302
10304
10310

**(Mark 5) -
Tie Rod End
Remover**

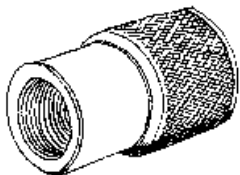

Operating Instructions

- 1) Remove any original nuts and/or cotter pins from parts to be separated.
- 2) Select correct tool according to thread size of tie rod.
- 3) Spin the tool completely onto the threaded arm.
- 4) Back tool off one complete turn backwards.
- 5) Strike the remover with a hammer; tie rod will become loose.
- 6) Remove tool and part to be removed will drop off.

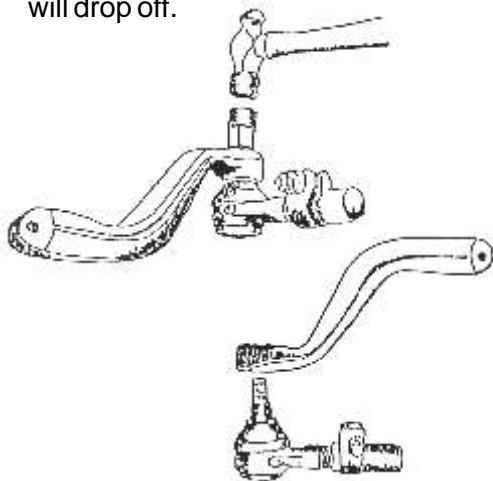

TIGER TOOL
International Incorporated

446 Harison St, P.O. Box 1420, Sumas, WA, 98295, U.S.A.
548 Sumas Way, Abbotsford, BC, V2S 8C4, Canada

Phone: 1-800-661-4661