


10407 - ROCKWELL AUTOMATIC SLACK ADJUSTER PULLER

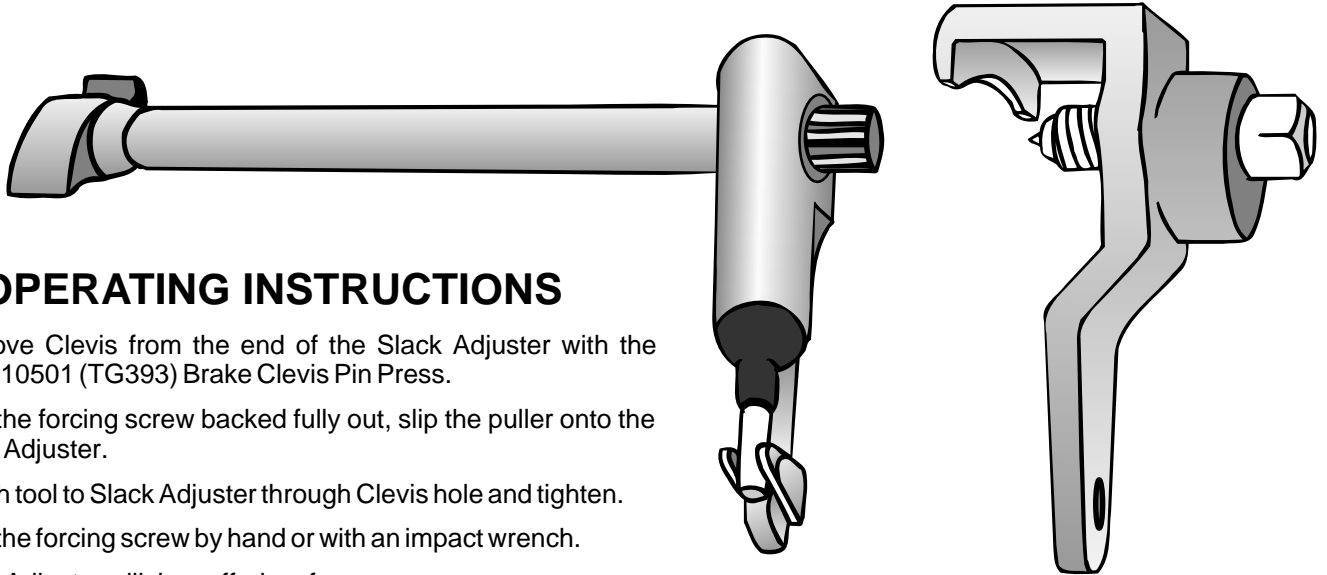

OPERATING INSTRUCTIONS

- 1) Remove Clevis from the end of the Slack Adjuster with the Tiger 10501 (TG393) Brake Clevis Pin Press.
- 2) With the forcing screw backed fully out, slip the puller onto the Slack Adjuster.
- 3) Attach tool to Slack Adjuster through Clevis hole and tighten.
- 4) Turn the forcing screw by hand or with an impact wrench.
- 5) Slack Adjuster will drop off when free.

Threads must be clean and well lubricated at all times.


Do not use over ½ inch impact wrench. Doing so will void warranty.

TIGER TOOL
International Incorporated
1-800-661-4661

- 1) Remove Clevis from the end of the Slack Adjuster with the Tiger 10501(TG393) Brake Clevis Pin Press.
- 2) With the forcing screw backed fully out, slip the puller onto the Slack Adjuster.
- 3) Attach tool to Slack Adjuster through Clevis hole using appropriate arm for offset and tighten.
- 4) Turn the forcing screw by hand or with an impact wrench.
- 5) Slack Adjuster will drop off when free.

Threads must be clean and well lubricated at all times.


Do not use over ½ inch impact wrench. Doing so will void warranty.

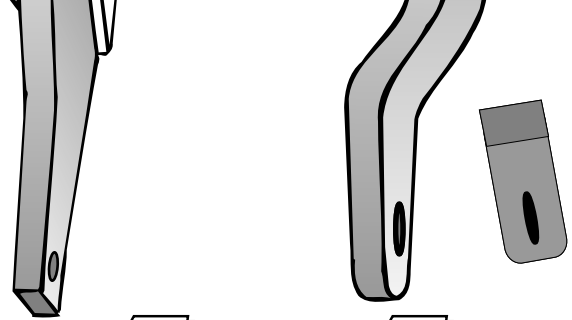

TIGER TOOL
International Incorporated

1-800-661-4661

10410 - HALDEX MULTI ADJUSTABLE AUTOMATIC SLACK ADJUSTER PULLER

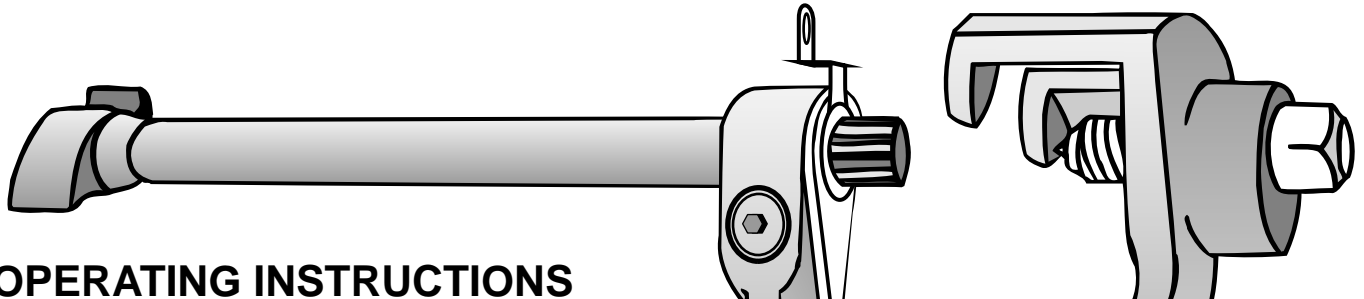

OPERATING INSTRUCTIONS