


10501 (TG 393) - BRAKE CLEVIS PIN PRESS

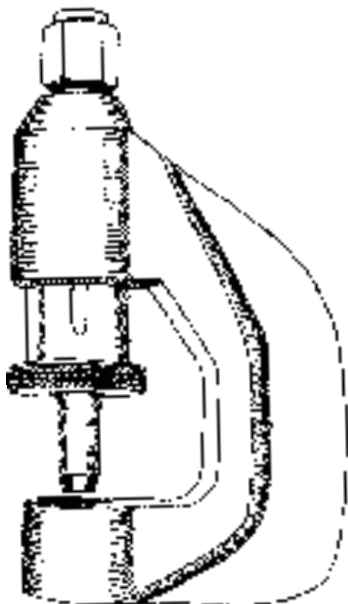

Do not use over ½ inch impact wrench.
Doing so will void warranty.

OPERATING INSTRUCTIONS

- 1) Back forcing screw fully out.
- 2) Pull back spring-loaded plunger and slip tool over clevis.
- 3) Turn forcing screw by hand or with impact wrench.
- 4) Tool will shear cotter pin, but remaining pieces may have to be removed by hand.
- 5) When pin is free of clevis, back out forcing screw and remove tool.

Threads must be clean and well lubricated at all times.

TIGER TOOL
International Incorporated

1-800-661-4661