


# **10850 AUTOMOTIVE YOKE PULLER**

## **OPERATING INSTRUCTIONS**

### **Half Round Yoke**

- 1) Remove large nut and washer retaining yoke to shaft.
- 2) Apply penetrating lubricant to splines of shaft, wing cap bolt holes, and forcing screw of tool.
- 3) Thread forcing screw into puller bar until threads begin to show through other side.
- 4) Holding puller bar assembly by forcing screw, position tool onto yoke. ( Note puller bar end reliefs should face yoke )
- 5) Attach selected adapter caps by four bolts.
- 6) Tighten down both caps.
- 7) Using up to a ½ inch impact wrench, begin applying power to forcing screw.
- 8) Continue turning forcing screw until yoke is completely removed.

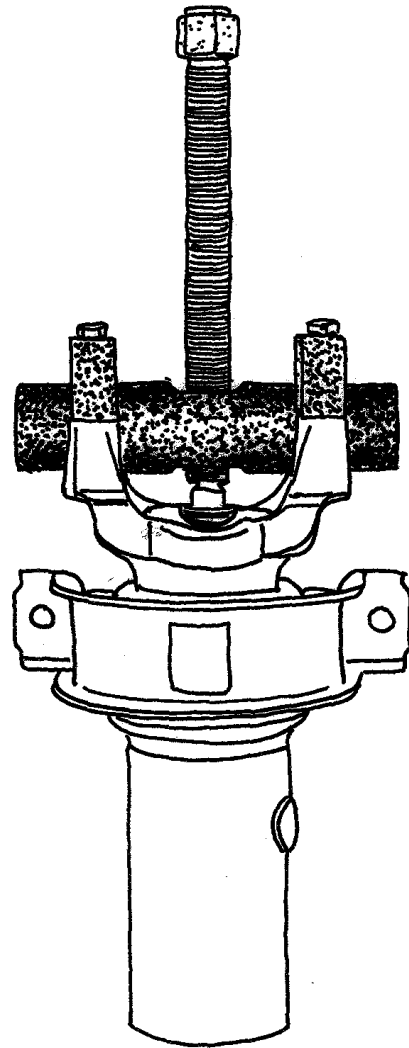

### **Safety Warning & Cautions:**

1. KEEP WORK AREA CLEAN. Clutter areas invite injuries
2. USE EYE PROTECTION. Always wear approved impact safety glasses or goggles when working with this tool.
3. STAY ALERT. Watch what you are doing. Do not operate this tool if you are unsure of its application and use.

***TIGER TOOL***  
***International Incorporated***  
**1-800-661-4661**