


# PART #20501 - 20502 - 20503 U-JOINT SERVICE KIT - SET


## U-JOINT PULLER PART #10105

Eliminates damage to driveshaft, yokes, cups and bearings.

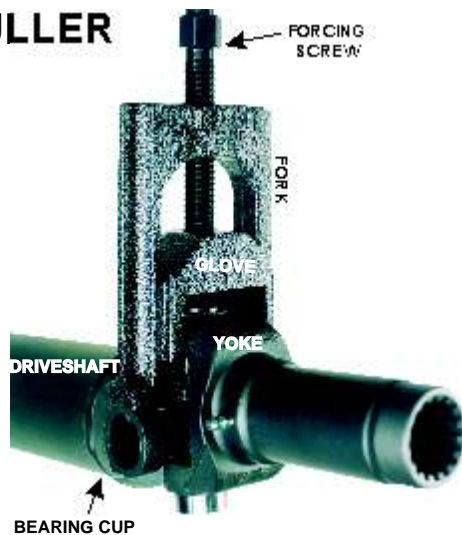

## BEARING CUP INSTALLER PART #10202

Lubrication: Use any quality oil on threads (not anti-seize) and any quality grease on load bearing surface in glove, under black plastic cap. For more information, please call us at 1-800-661-4661.

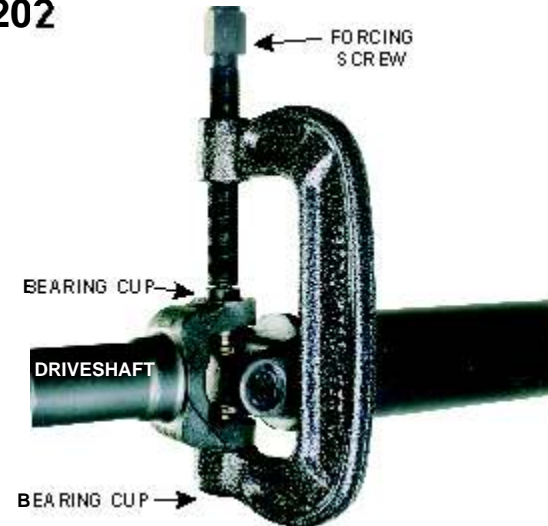

### OPERATING INSTRUCTIONS

- 1) Remove all fasteners from bearing cups.
- 2) Slip the U-Joint Puller over the yoke of the driveline.
- 3) Turn the tool's forcing screw clockwise with either a hand or impact wrench. (Note: reverse thread)
- 4) Once bearing cup has been removed, repeat the process on the remaining bearing cups.

The 10105 U-Joint Puller may be used with up to a 1/2" impact wrench without voiding warranty.

### OPERATING INSTRUCTIONS

- 1) Place new bearing cup against magnet side of installer.
- 2) Insert second bearing cup into driveline.
- 3) Align installer over both bearing cups, and line up U-joint cross.
- 4) Turn forcing screw by hand or with impact wrench.
- 5) Both bearing cups will be pressed in at the same time.
- 6) Repeat process on two remaining bearing cups.

**TIGER TOOL** *International Incorporated*  
Phone: 1-800-661-4661