


10201 (Mark4) - Bearing Cup Installer

Operating Instructions

- 1) Ensure all parts to be assembled are clean and/or greased where applicable.
- 2) Double check all needle bearings are present and placed correctly.
- 3) Start pressing bearing cup into yoke by hand, making sure u-joint cross and bearing cup bolt holes line up.
- 4) Place installer onto bearing cup, threading bolts into yoke.
- 5) Using an impact or hand wrench, turn forcing screw until cup is flush to yoke.
- 6) Remove tool, and install bearing cup bolts.

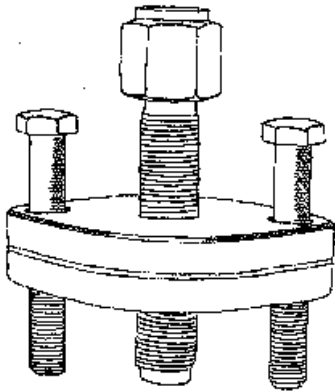

TIGER TOOL
International Incorporated

446 Harison St, P.O. Box 1420, Sumas, WA, 98295, U.S.A.
548 Sumas Way, Abbotsford, BC, V2S 8C4, Canada

Phone: 1-800-661-4661