


10202 (TG 292) - Bearing Cup Installer

Operating Instructions

- 1) Place new bearing cup against magnet side of installer.
- 2) Insert second bearing cup into driveline.
- 3) Align installer over both bearing cups, and line up U-joint cross.
- 4) Turn forcing screw by hand or with impact wrench.
- 5) Both bearing cups will be pressed in at the same time.
- 6) Repeat process on two remaining bearing cups.

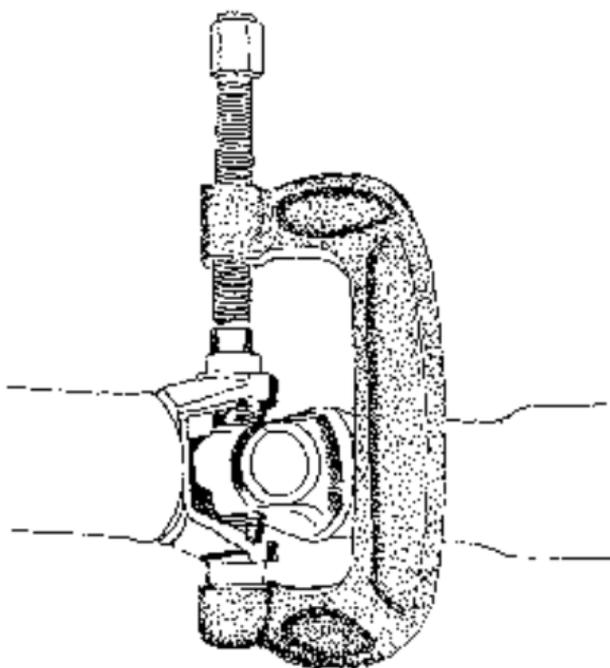

TIGER TOOL
International Incorporated

446 Harison St, P.O. Box 1420, Sumas, WA, 98295, U.S.A.
548 Sumas Way, Abbotsford, BC, V2S 8C4, Canada

Phone: 1-800-661-4661